Threshold Sleeve Installation

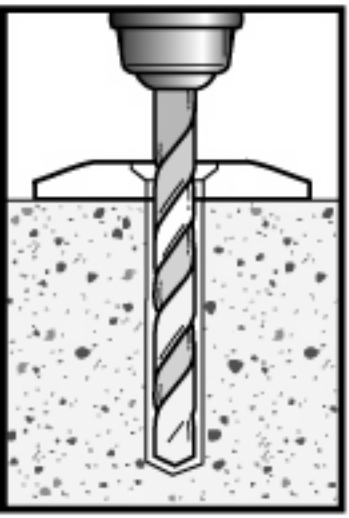

Drill...

Drill the hole to a depth greater than the minimum embedment listed on the package. Clean the hole.

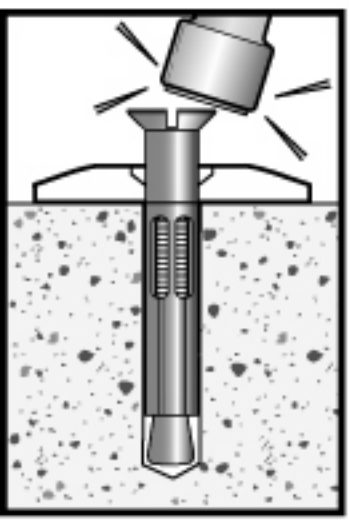

Drive...

Drive the anchor through the material to be fastened until flush with the surface of the material.

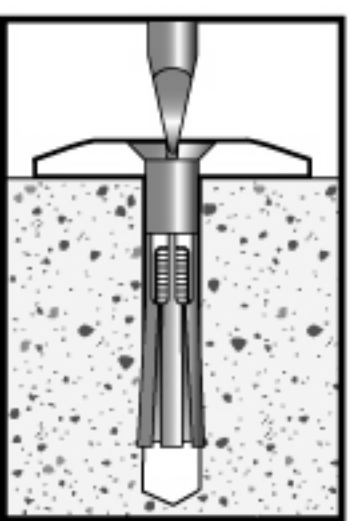

Expand...

Expand the anchor by tightening the head 2 to 3 turns, or to the specified torque requirement.